



TEMPHAWK

User Manual



TEMPHAWK Introduction

Contents

TEMPHAWK device x1



Adaptor x1



USB charging cable x1



Temperature & Humidity sensor cable x1





LVD

CE FC

Sensor Probe

- Sensor cable length: 1.5 M
- Temperature Range: -40°C to $+125^{\circ}\text{C}$
- Humidity Range (%RH): 0% to 100%



Product Identification

- Each device has an exclusive QR code as ID



TEMPHAWK Device

The Device

- Overall Dimensions: 68 x 86 x 36 mm
- Device Sensing Range: -20°C to $+60^{\circ}\text{C}$
- Micro USB (certified with IP67)



Waterproof
Cover



Sensor port



Charging port



Charging

- Plug the charging cable into the charging port.
- The LED light shows red when a device is being charged.
- It takes about 5 hours for a device to be fully charged.
- Once the device is being fully charged, it can last for at least 10 months.



LED Light Indication

LED Light		
Status	Description	Status icon
Charging	Light glows	
Charging Completed	None	
Low power (<15%)	Blink	

When the device is in low power mode, the LED light will blink 3 times every 5 minutes.



Installation

- ▶ **Step 1**
 - Plug the sensor cable into the device to turn it on.
- ▶ **Step 2**
 - Secure the sensor cable with the screw on the sensor port. Once being securely screwed; the device is ready for monitoring.
- ▶ **Step 3**
 - Deploy TEMPHAWK solution in the environment where you'd like to monitor.

⚠ Notice :

- The TEMPHAWK device cannot be deployed in an environment that is fully covered with metal.
- The direction of the device can affect the signal strength. For better signal, please place the device with an upper position.

Hardware Troubleshooting - Contact us



Please provide the following information and send it to service@fox-tech.co

- Company Name
- Contact person
- Order Number
- Product Name
- Device ID
- Time of problem occurred (YY/MM/DD hh:mm)
- For Full Manual Version Please Download from <http://www.temphawk.net/>